




# Introducing the all NEW CLIM8ZONE™

AN EXPERIENCE YOU WON'T  
FIND ANYWHERE ELSE



## SPECS

- Ability to heat and cool the water in the spa
- Uses less energy to keep the water hot, providing smart savings
- Directly integrated with the SpaTouch3™ panel
- Unlike other spa heat pumps, Clim8zone™ has the ability to function at low ambient air temperatures down to -20°C/-4°F

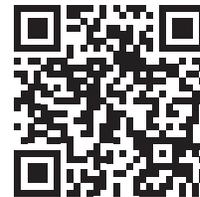

**FOR MORE INFORMATION**

Visit us online:

[www.balboawater.com/Clim8zone](http://www.balboawater.com/Clim8zone)

# CLIM8ZONE™

THE CLIM8ZONE™ OFFERS USERS THREE TEMPERATURE OPTIONS FOR **HEATING** AND **COOLING** THE SPA WATER

1



## Heating & Cooling Mode

Heats and cools the spa water as per the spa user's designed setting in the spa panel.

2



## Heating only mode

Heats the spa water.

3



## Cooling only mode

Cools the spa water.

## AUTO SMART MODE



 
### Default Mode

For heat and cooling



### Clim8zone™ Computer

Automatically adjusts the compressor frequency using an artificial intelligence algorithm that is based on ambient air temperature, water temperature and other factors.



### Artificial Intelligence

Built in algorithm automatically adjusts the heat pump for optimal heating/cooling performance and efficiency.




### Variable Output

Auto adjust of heating and cooling capacity.

# CLIM8ZONE™

## OPERATES EFFORTLESSLY FROM THE SPATOUCH3™ PANEL

User adjusts the Set Temperature. The spa System does the rest.

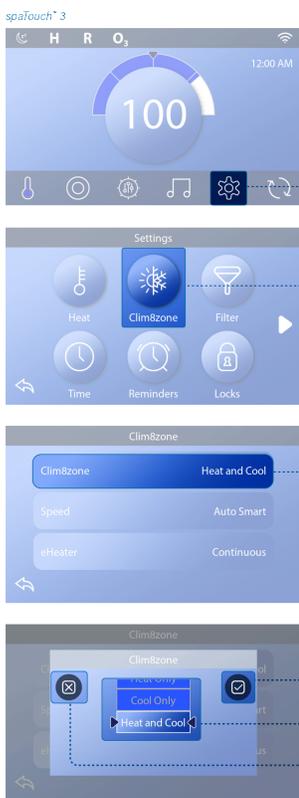

### SET THE TEMPERATURE MODE

Follow these steps to set the Temperature mode.

- 1 - Press the Settings button (A) to enter the Settings screen.
- 2 - Press the CLIM8ZONE™ button (B) to enter the CLIM8ZONE™ screen.
- 3 - Press the CLIM8ZONE™ button (C) to enter the CLIM8ZONE™ screen.
- 4 - Select one of the following Temperature modes (E):

- Heat Only**
- Cool Only**
- Heat and Cool (Default Mode)**
- Disabled**

5 - Press the Save button (D) to save your setting. Press the Cancel button (F) to cancel your setting.

Your setting is complete.



### SET THE SPEED MODE

Follow these steps to set the Temperature mode.

- 1 - Press the Settings button (A) to enter the Settings screen.
- 2 - Press the CLIM8ZONE™ button (B) to enter the CLIM8ZONE™ screen.
- 3 - Press the Speed button (C) to enter the Speed screen.
- 4 - Select one of the following Speed modes (E):

- Manual High**
- Auto Smart (Default Mode)**
- Manual Low**

5 - Press the Save button (D) to save your setting. Press the Cancel button (F) to cancel your setting.

Your setting is complete.

