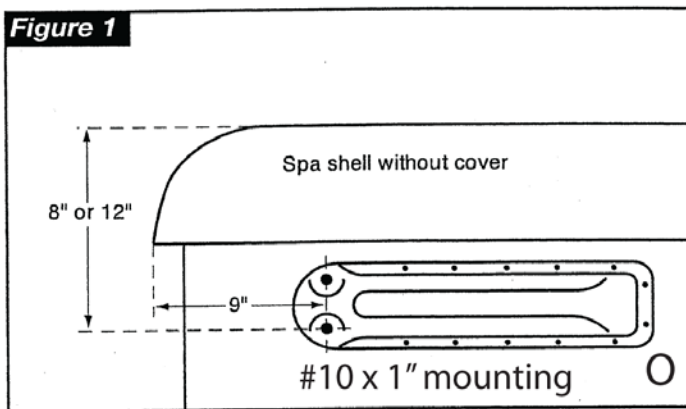
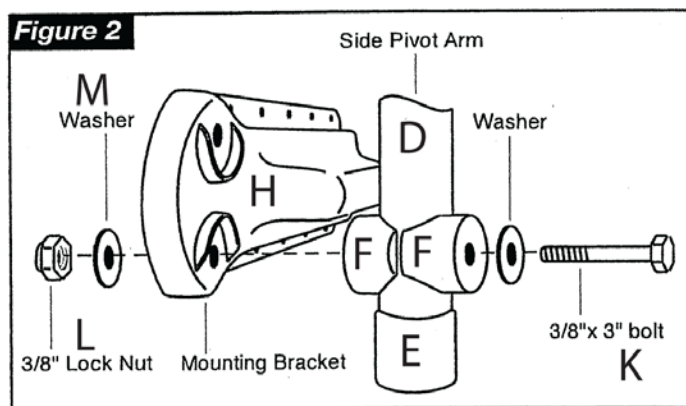
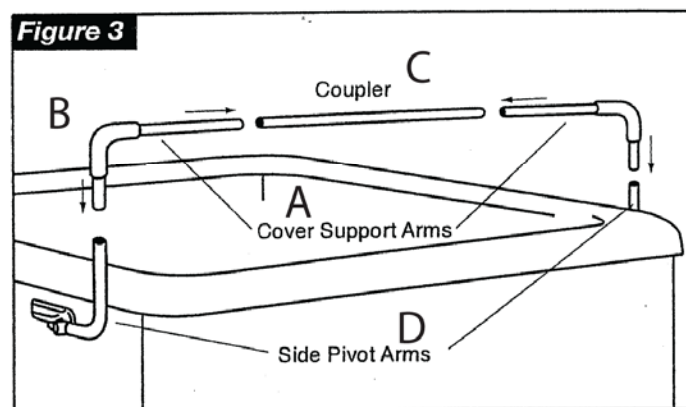
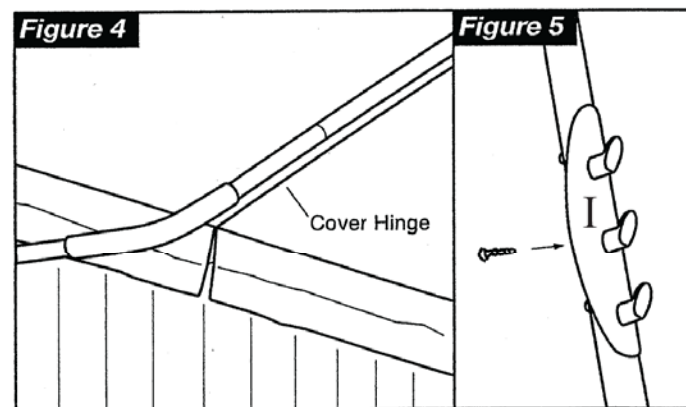
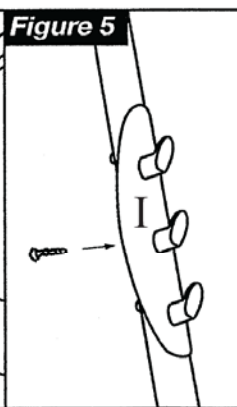


**Figure 1****Figure 2****Figure 3****Figure 4****Figure 5**

# CoverMate I

## Installation instructions

### Step #1

Position the spa cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.

### Step #2

Using the #10 X 1" mounting screws, attach the left and right Mounting Brackets to the appropriate sides of the spa. **Caution:** To prevent splitting of wood cabinet, pre-drill holes with a 1/16" drill bit. **Mounting height is optional. (See Fig. 1).** By positioning the Brackets at 8" down from the top of the spa shell, approx. 9" clearance behind the spa will be needed. Mounted at this position approximately 75% of the spa cover will be standing above the spa surface in the off position. By positioning Brackets 12" down from the top of the spa shell, approx. 15" clearance behind the spa will be needed. Mounted at this position approximately 50% of the spa cover will be standing above the spa surface in the off position.

### Step #3

Connect the Pivot Arms to the Mounting Brackets. (See Fig. 2). After Pivot Arms are connected tilt them back into the upright position.

### Step #4

Insert the long end of the Support Arms into the Center Coupler piece. Then slide the Support Arms into the Pivot Arms (See Fig. 3).

### Step #5

Lay the Covermate on the spa cover. Adjust the Coupler Piece and Support Arms so that the Coupler Piece is laying parallel to the spa cover's hinge about a 1/2" away. (See Fig. 4) Using the #10 self tapping screws, fasten Support arms to Pivot Arms and the Coupler Piece.

**Note:** Be sure to rotate the Coupler Piece so that the inserted screws are at a horizontal angle with heads facing the back of the spa.

### Step #6

Slip the black hand grips to the edge of the spa cover and snap the black plastic screw head covers on. Push the non-thread plug into the unused bracket (H) hole.

### Step #7

Attach the provided 3 hook TowelMate on the preferred side of your Covermate by simply snapping it into place and inserting the middle self tapping screw. (See Fig. 5)

ITEM	PART#	DESCRIPTION	QTY
A	100001	SUPPORT ARM - 20" X 40"	2
B	100002	FOAM GRIP 8"	2
C	100003	CENTER COUPLER 1-1/8" X 3'7"	1
D	100004	PIVOT ARM 1-1/4" X 3'2"	2
E	100007	PIVOT ARM CAP	2
F	100344	BUSHING .8825" THICK	4
H	100021	MOUNTING BRACKET	2
I	100008	TOWELMATE	1
K	100026	3/8 X 3" HEX CAP SCREW	2
L	100011	3/8 NYLON LOCKNUT	2
M	100012	3/8 FLAT WASHER	4
N	100013	#10 X 58" SELF TAPPING SCREWS	12
O	100014	#10 X 1" MOUNTING SCREWS	24
P	100015	DOME CAP-LARGE	2
Q	100016	DOME CAP-SMALL	36
R	100347	7/16" PLUG	2
S	100017	INSTRUCTION SHEET - CMI PLASTIC	1

**CAUTION!**

Do not use the Covermate in high wind condition (greater than 10 m.p.h.). Injury from the spa cover being blown over and impacting the spa user can occur.