



Installation Instructions 2¹/₂" Poly Storm Gunite jet (P/N 210-3710)


INSTALLATION PROCEDURES AND PRESSURE TESTING

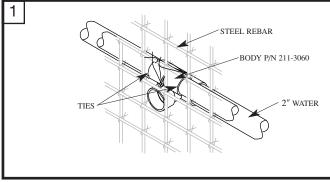


Hang Gunite Poly jet Body with ties through preset holes onto steel rebar.

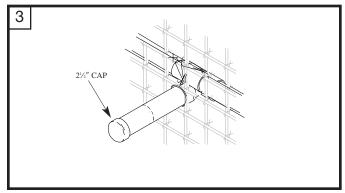



Glue $2^{1/2''}$ cap onto end of pipe for pressure test before guniting.

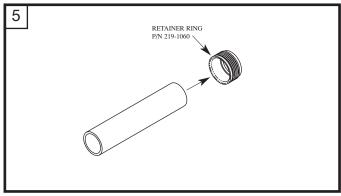


Take 1" pvc pipe, same length as the $2^{1/2}$ " pipe and glue the retainer ring to it.

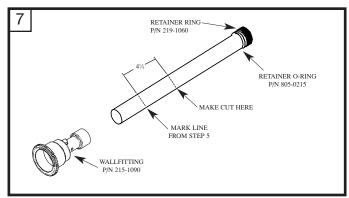




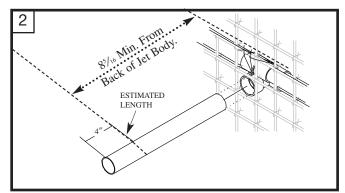



Estimate needed length of $2\frac{1}{2''}$ pvc pipe by thickness of wall. Cut $2\frac{1}{2''}$ pvc pipe at least 4" longer than estimated. Then glue $2\frac{1}{2''}$ pvc pie to Body.

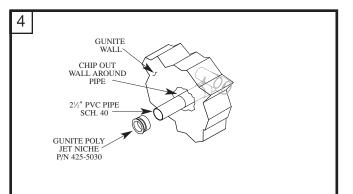

After pool guniting chip out around pipe. Before plastering cut the $2\frac{1}{2}$ " pvc pipe inside the wall and glue on the Gunite Poly Jet Plaster Niche P/N 425-5030 (not included). Cover niche with tape then plaster over niche.

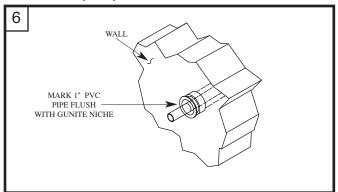



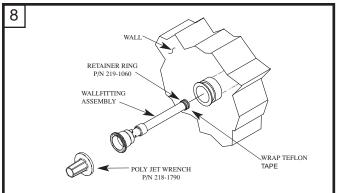


Wrap Teflon tape on retainer ring if necessary and thread the 1'' PVC pipe back into body with poly jet wrench, making sure of a snug fit.




INSTALLATION INSTRUCTIONS CON'T. 2¹/₂" Poly Storm Gunite Jet (P/N 210-3710)


INSTALLATION PROCEDURES AND PRESSURE TESTING

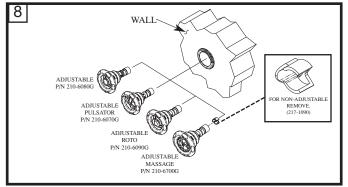

Always use at least one non-adjustable internal per spa to prevent deadheading pump.

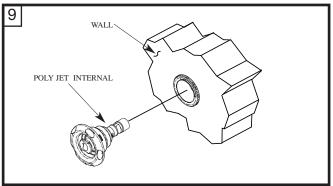

Align tab behind escutcheon face with slot on wallfitting. Location of slot and tab are shown below. Push poly internal into wallfitting until it snaps into place. To adjust water flow turn clock-wise to reduce water flow. To increase water flow turn counterclockwise until it stops turning. To remove continue turning counter-clock wise past stopping point, you will hear a snap to confirm release of poly internal.

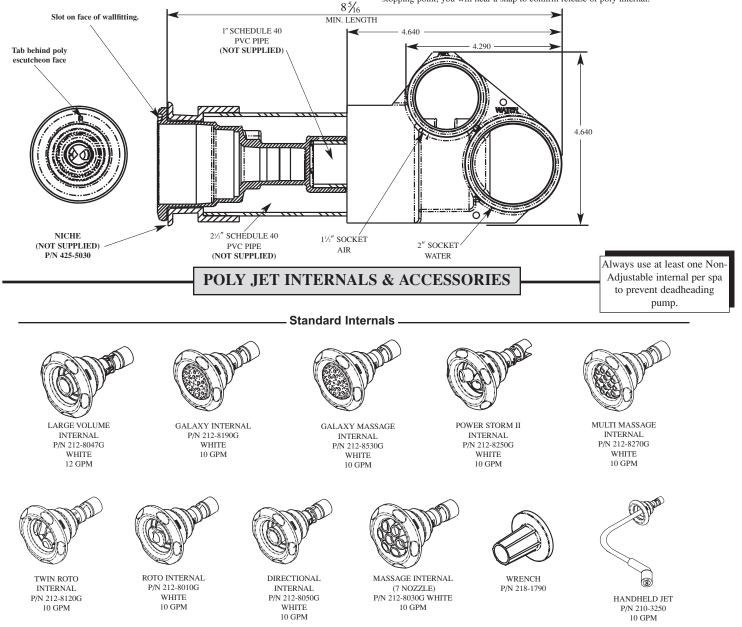

WATERWAY 2200 E. Sturgis Rd, Oxnard, CA 93030 (805) 981-0262 FAX (805) 981-9403 10252005/ 810-0180 Page 2