

Motorised winding system for bar supported safety covers

WaluCOOL



- Installation instructions
- Instructions for use
- Maintenance instructions
- Safety recommendations
- Warranty



PT ES PL SE NL IT GB DE FR


PLEASE KEEP THIS DOCUMENT FOR FUTURE REFERENCE

Thank you for choosing WALU COOL to wind your swimming pool cover.

FITTING THE SQUARE WINDING PIN*

1



Use a size 10 socket spanner to loosen the screw on the back of the square winding pin. Take out the screw and the washer.

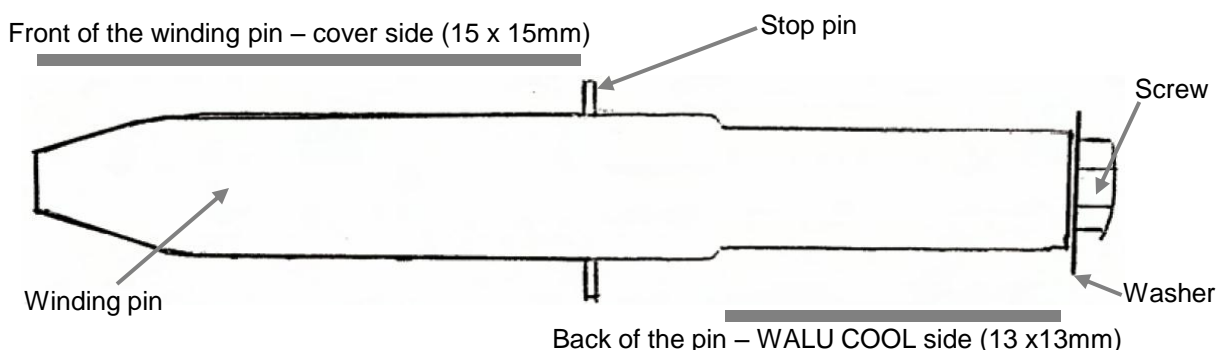

2

Place your WALU COOL on a stable, flat surface.

- Push the 13mm square side of the pin into the WALU COOL reduction gear as far as it will go.
- Put back the washer and screw on the back of the square winding pin from the opposite side and screw up firmly using the socket spanner to ensure the square pin is locked into the motorised mechanism.

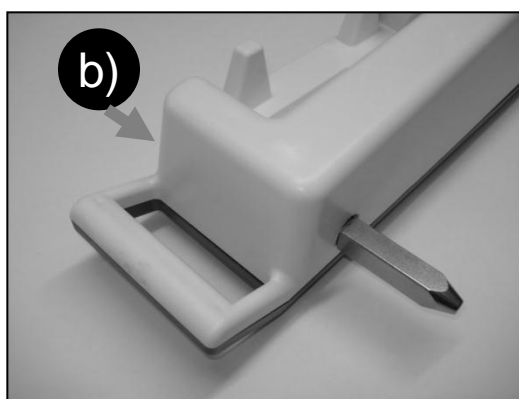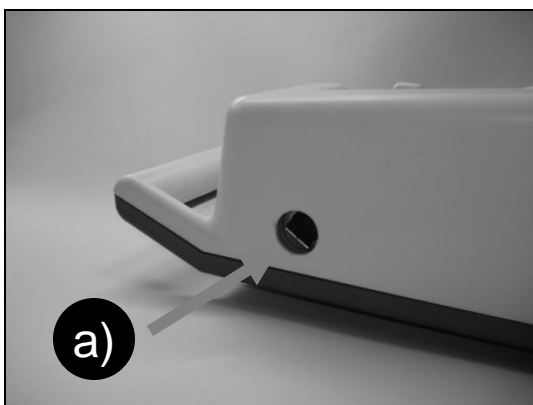

3

After fully charging the battery (see instructions for use, page 4/4), your WALU COOL is ready for use.

* Optional for covers equipped with a 13 x 13 mm square winding pin


Before attempting to wind your pool cover, ensure you have removed all its removable fasteners (stainless steel fasteners, cabiclic cords...).

When winding up the cover, ensure it rolls up straight on the first turns and that there are no foreign bodies on the cover or in the way of the WALU COOL.


WALU COOL slots simply into the square (15 x 15 mm) hole in the winding tube of your WALU POOL cover. For covers already fitted with a square winding pin (13 x 13 mm) there is no need to install the winding pin supplied with the WALU COOL.




Position the WALU COOL in front of the winding tube of your pool cover at the opposite end of the pool to the storage area, on the right of the cover. (Left winding available as an option)

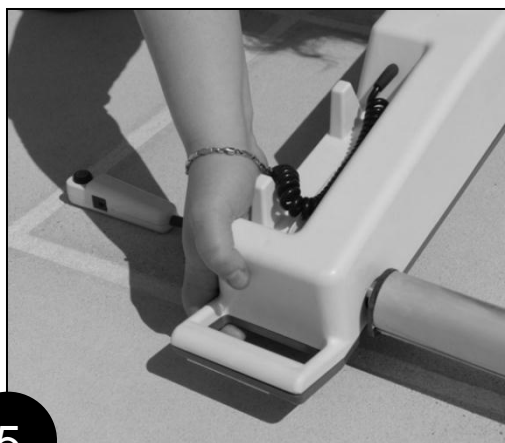

Slot the square winding pin on the WALU COOL into the square hole in your WALU POOL as far as it will go.

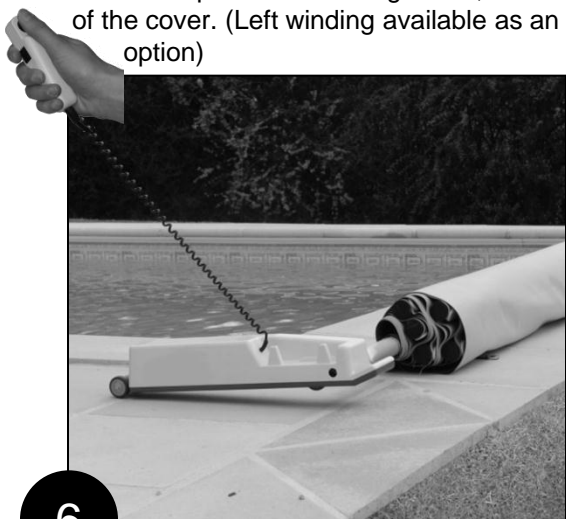

Hold down the button on the remote control and walk with the WALU COOL until your cover is fully rolled up.

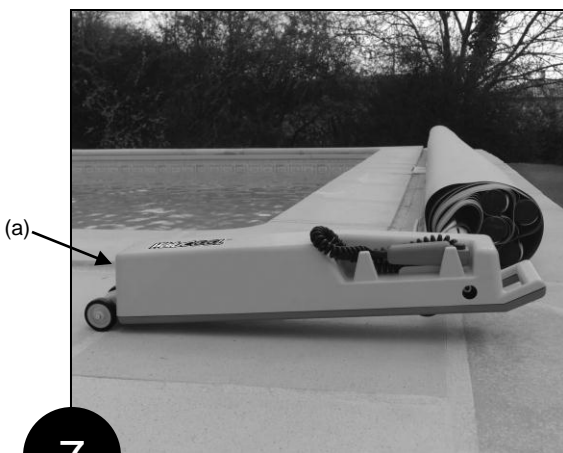

When you have finished winding up the cover, remove the WALU COOL by pressing lightly on the REVERSE button (a) situated at the back of the device in order to release the winding pin more easily.

8

To unwind the cover, pull on the pull strap, positioning yourself on the opposite side to the cover storage side (cf. instructions for use for your cover).



Instructions for use (cont.)

Maintenance instructions

Safety recommendations

Warranty

WALU COOL runs on a 12 V battery integrated in the housing, which needs recharging from the mains about every 10 windings. To recharge WALU COOL, plug the charger into the mains: 220 V plug (the red light comes on). Connect the jack plug on the WALU COOL handle (the red light goes out). Charging begins automatically. The red light comes on when the battery is fully charged.

The battery charger must only be used to charge the sealed WALU COOL battery. To increase your battery life, we recommend that you charge it fully each time and only recharge it when it is completely discharged.

9



MAINTENANCE INSTRUCTIONS

- Keep the WALU COOL out of the reach of children, protect it from bad weather and avoid contact with chlorinated products.
- In the winter, store the WALU COOL in a dry place and charge it systematically every 2 months using its charger.
- The battery charger must be stored and used in a dry place.
- Dismantling the motorised mechanism or its charger could lead to a risk of ignition and/or electrocution and would invalidate the warranty.
- To clean the WALU COOL, wipe over with a damp cloth.
- The battery charger must be cleaned with a dry cloth. Never clean the charger when it is plugged in. Do not use the charger if the casing is damaged.
- The battery in the WALU COOL must be kept away from any source of heat (flames & sparks) during its charging cycle.

SAFETY RECOMMENDATIONS

Always keep an eye on the pool while opening or closing the pool cover.
The cover must only be wound by a responsible adult.

WARRANTY

- The WALU COOL motorised mechanism is guaranteed for 1 year (with the exception of the battery which does not benefit from any warranty) subject to compliance with the recommendations above.
- For the after sales service, contact your dealer first.

Technical specifications:

Electric motor: 12 V
Battery voltage: 12 V
End-of-charge voltage: 14 V
Charging current: 720 mA
Input voltage: 220 V 50 Hz
For pool with max. dimensions 11 x 5 m

