




Quick Start Card


in.ye-3-ce™ & in.ye-5-ce™ European version

1- Connect all outputs & keypads

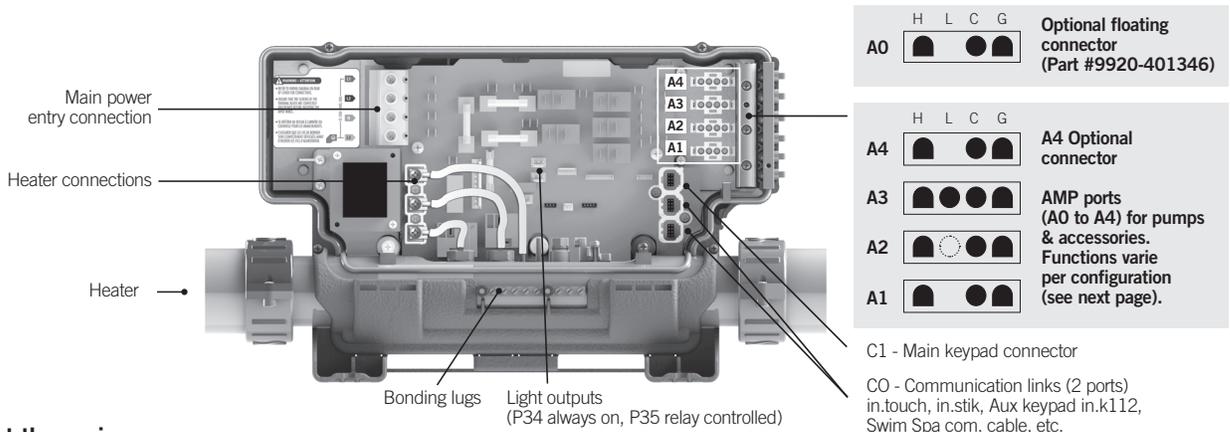


2- Connect the main power

Determine jumper positions for number of phases

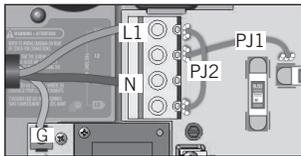


1 phase connection

Phase jumpers	Position
PJ1	P7-P13
PJ2	P10-P74

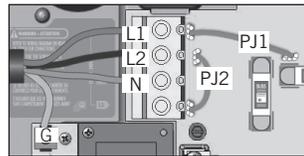


2 phase connection

Phase jumpers	Position
PJ1	P7-P10
PJ2	P13-P74

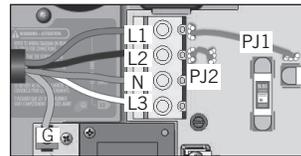

3 phase connection (default)

Phase jumpers	Position
PJ1	P7-P10
PJ2	P11-P13

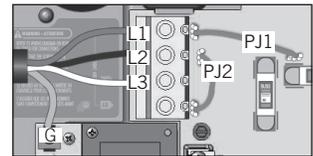

3 phase Delta connection

Phase jumpers	Position
PJ1	P7-P10
PJ2	P13-P74


input voltage: 230 V, 50 Hz (line-to-Neutral)

input voltage: 230 V, 50 Hz (line-to-line)


Correct wiring of the electrical service box, RCD, and pack terminal block is essential. Power must be off during this step.

WARNING! All connections must be made by a qualified electrician in accordance with the national electrical code and any state, provincial or local electrical code in effect at the time of the installation. This product must always be connected to circuit protected by a residual-current device (RCD).


3- Select spa configuration (if prompt on startup)

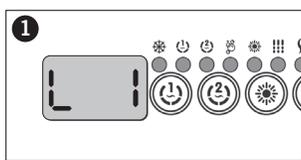

At first startup the keypad display will show **Lx** or **LLx**, where « x » representing the config. number. Some spa packs come with a pre-selected config. and you may skip this step if your system automatically starts up¹.

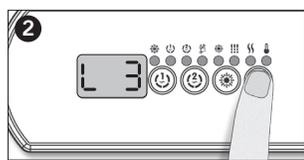

Use the **Up/Down** key to choose the new low level configuration number.

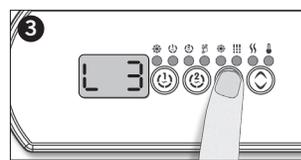

Press the **Program**² key to confirm the selection.

For more information, see our website: www.geckoalliance.com

¹ **Note:** To re-enter the low level selection menu, hold the Pump 1 key for 30 seconds.

Note: For the Color keypad series, select **Settings** menu, go into **Electrical config** and choose the appropriate Low level.

² **Note:** If the keypad does not have a Program or Filter key, use the Light key instead.


4- Select breaker current

Specify the current rating and the number of phases of the RCD used to ensure safe and efficient current management (and no RCD trippings).



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.

Note: For the Color keypad series, select **Settings** menu, go into **Electrical config** and choose Input current.

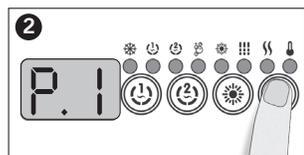

Current setting for each phase setting

# of phases	Current setting range
1	10 to 48 A
2	10 to 20 A
3	10 to 16 A

Choose the number of phases supplying your spa (1-3). Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.



The values displayed by the system correspond to the maximum amperage capacity of the RCD.



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

Note: If the keypad does not have the Program or Filter key, use the Light key instead.

For more information, see our website: www.geckoalliance.com



Configuration selection chart

Software #382, rev. 003

Standard config. #	Pump 1	Pump 2	Pump 3	Blower	Circ. Pump (CP) configuration	Ozone (O3) configuration ¹	Filter cycle daily	Heater pump
1	2SP (A3) 10A-4A	–	–	–	–	During filter cycle with P1 (A1)	2 * 2 hour with P1	with P1 12A
2	2SP (A3) 10A-4A	1SP (A1) 6A	–	–	–	–	2 * 2 hour with P1	with P1 12A
3	2SP (A3) 10A-4A	–	–	X (A1) 4A	–	–	2 * 2 hour with P1	with P1 12A
4	2SP (A3) 10A-4A	–	–	–	During filter cycle (A1) 3A	–	2 * 6 hour with CP	with CP 12A
5	1SP (A3) 10A	–	–	–	During filter cycle (A1) 3A	During filter cycle with CP (A2)	2 * 6 hour with CP	with CP 12A
6	1SP (A3) 10A	1SP (A2) 6A	–	–	During filter cycle (A1) 3A	–	2 * 6 hour with CP	with CP 12A
7	1SP (A3) 10A	–	–	X (A2) 4A	During filter cycle (A1) 3A	–	2 * 6 hour with CP	with CP 12A
8	1SP (A3) 10A	1SP (A2) 6A	1SP (A1) 12A	–	Always on (AO) ² 1A	–	2 * purge CP always on	with CP 12A
9	1SP (A3) 10A	1SP (A2) 6A	–	X (A1) 4A	Always on (AO) ² 1A	–	2 * purge CP always on	with CP 12A
10	2SP (A3) 10A-4A	1SP (A1) 6A	–	–	Always on (AO) ² 1A	–	2 * purge CP always on	with CP 12A
11	2SP (A3) 10A-4A	–	–	X (A1) 4A	Always on (AO) ² 1A	–	2 * purge CP always on	with CP 12A
12	2SP (A3) 10A-4A	1SP (A1) 12A	–	–	–	–	2 * 2 hour with P1	with P1 12A
13	1SP (A3) 10A	1SP (A1) 12A	–	–	During filter cycle (A2) 3A	–	2 * 6 hour with CP	with CP 12A
14	1SP (A3) 10A	1SP (A1) 12A	–	X (A2) 4A	Always on (AO) ² 1A	–	2 * purge CP always on	with CP 12A
15	2SP (A3) 12A-4A	1SP (A1) 12A	–	–	Always on (AO) ² 1A	–	2 * purge CP always on	with CP 12A
16	2SP (A3) 10A-4A	–	–	–	During filter cycle (A1) 3A	–	2 * 2 hour with P1	with CP 12A

¹ When the Ozonator is not controlled by a relay, it can be tied to Pump 1 Low speed or Circ. Pump. Pump using cable splitter AMP PN: 9920-401369.

² AO floating connector use Black: P28, White: Any available N connector, Green: Any available G connector. Floating connector not supplied. Part #9920-401346.

Glossary

(P1L)	Pump 1 Low speed
(CP)	Circulation Pump
X	Installed
1SP	High speed only
2SP	High and Low speed
(OUT, AMP, Relay, Tab)	Output connector
13A-4A	Current High - Low speed

For complete TechBook or more information, see our website: www.geckoalliance.com